

Double Hung Window Opening Control Device Important Safety Information



Installer: Leave this safety information for the current or future occupant.

NOTE: This safety information is for Ultimate Wood Double Hung product (does not apply to the Clad Ultimate Double Hung Next Generation family). When installed and used as directed, the Window Opening Control Device meets the requirements of ASTM F2090-10.



WARNING!

Follow manufacturer's assembly and installation instructions carefully. Failure to do so may result in accidental window falls.



CAUTION

All applicable building and fire codes should be consulted before installing window opening control devices. Contact local building code department or fire department for specific applicable codes.

NOTE: Numbers listed in parentheses () are metric equivalents in millimeters rounded to the nearest whole number.

Maximum unit size device is intended for:	
Unit	Frame Size
UWDH	41 3/8" (1051) X 97" (2464)
	45 3/8" (1153) X 81" (2057)
UDHM	59 3/8" (1508) X 120 3/8" (3058)
UWDHM	59 3/8" (1508) X 121" (3073)
CINDH	45" (1143) X 77 3/8" (1965)
WINDH	45" (1143) X 77 3/8" (1965)
IZ3	Not available

IMPORTANT

- The window opening control device must be installed in such a manner that after it is installed and engaged, no space shall exist at the lowest opening that would permit the passage of a rigid sphere measuring 4" (102) in diameter.

- Once a month test and verify proper operation of the window opening control device. Ensure the device automatically re-engages when the sash is closed. After the verification is complete, engage the device by closing the sash and locking the window.
- Teach all household members six years old and older how to operate the release mechanism in case of emergency.



WARNING!

- **No window rescue above 75 feet (22,860) or 6th floor.** Do not rely on being rescued from windows above 75 feet. Follow building fire escape plan. Fire rescue ladder may not reach beyond 75 feet.



WARNING!

- **Blocks escape in fire and emergency unless released.** Need to properly operate release mechanism to open the window opening control device. The window opening control device should remain engaged unless needed in the case of an emergency. Never apply padlocks or devices that require a key or tool to unlock them to the release mechanism.



WARNING!

- **POSSIBLE FALL HAZARD!** This window opening control device is designed to help protect against accidental window falls by children five years old and younger.
- **This device is not a substitute for careful supervision of all young children.** Keep window opening control devices securely engaged unless needed for use in an emergency.

Operating Instruction

To Reset the Window Opening Control Device

1. Close the window sash fully. The control device will automatically reset itself once the window sash has been opened past the control device and closed.



To Operate the Release Mechanism

1. Push red dots to depress levers. Both devices on the sash must be depressed to open window for egress.

