

USHG2 & USHRTG2 Both Sash Stationary Installation Instruction

ABSTRACT: This instruction is for installing a sash limiter for a both sash stationary unit on a Ultimate Single Hung G2 and Ultimate Single Hung Round Top G2 windows.

Installing the Sash Limiter

Both Sash Stationary Kits include items shown in [Figure 1](#).

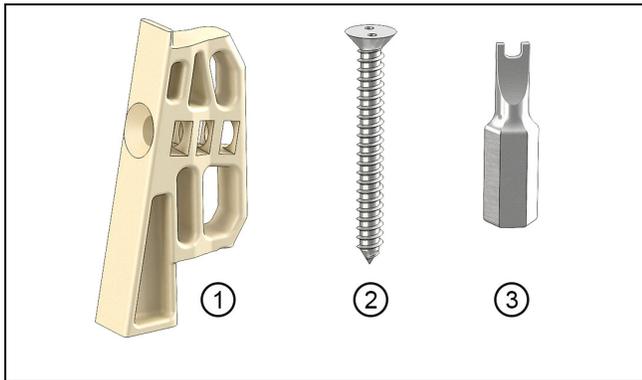


Figure 1

1	2-Sash limiters
2	2-#6 x 1 1/4" screws
3	1-#6 Spanner drill bit

Kit Part Numbers:	
Beige	11850200
Black	11850201
White	11850202

NOTE: Limiter and fastener can be installed with the sash removed to provide more clearance.

1. Insert sash limiter into jamb. See [Figure 2](#).

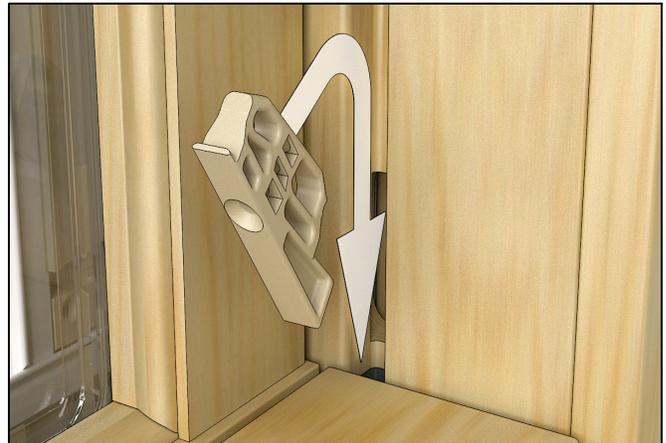


Figure 2

! CAUTION!

Hand tools are recommended for the next step, using a power tool could damage the covers.

2. Fasten #6 x 1 1/4" screw through sash limiter. See [Figure 3](#).



Figure 3