

Modern Sliding Screen

Installation Instructions

This instruction is intended for use with the following products:

- Modern Sliding Door: produced April 2025 to present.

NOTE: Numbers listed in parentheses () are metric equivalents in millimeters rounded to the nearest whole number.

You Will Need to Supply:

- Tape Measure
- Pencil
- Power drill/driver with #1 Phillips bit
- Flat bladed standard screwdriver
- 1/16" (1.5) drill bit
- Awl
- Combination square

Install and Adjust the Screen

1. From the exterior, lift the screen and insert the roller bar assembly attached to screen into the roller track. Rotate the bottom of the screen and rest the bottom rail guide on the roller track. [See Figure 1.](#)

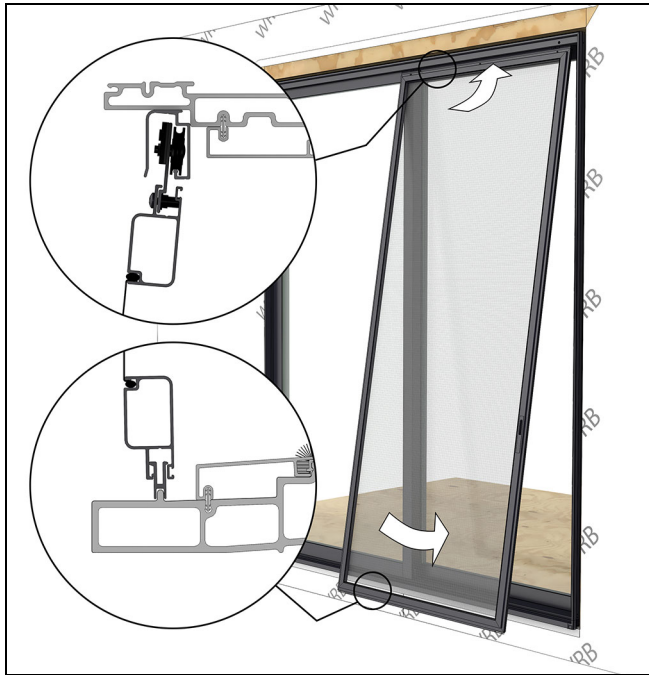


Figure 1

2. Remove the plugs from the screen track to reveal the access holes. Slide the screen panel so the adjustment screws on the screen line up with the access holes in the screen track. Loosen or tighten the adjustment screws with a flat bladed screwdriver to move the screen up or down. Obtain an even reveal along the entire height of the screen panel. [See Figure 2.](#)

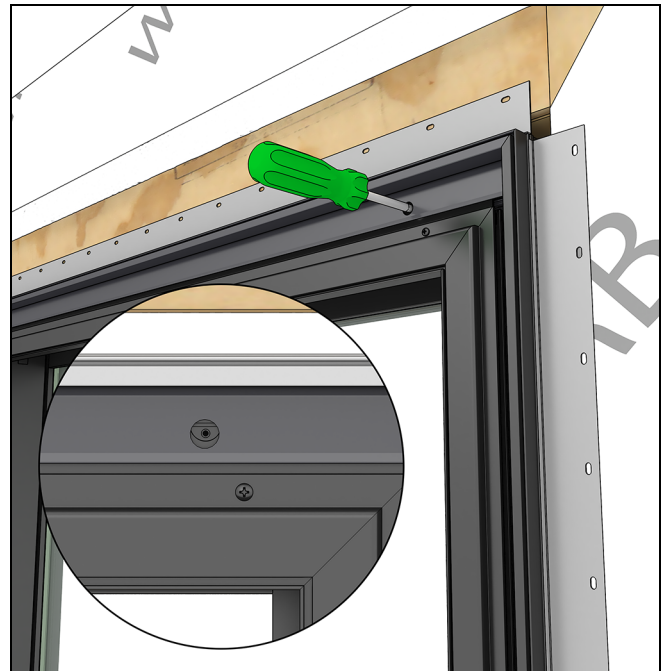


Figure 2

Install the Screen Strike

1. Slide the screen out of the way. Measure and make two marks on the jamb at 34 7/8" (886) and 35 3/8" (899) from the sill. [See Figure 3.](#)

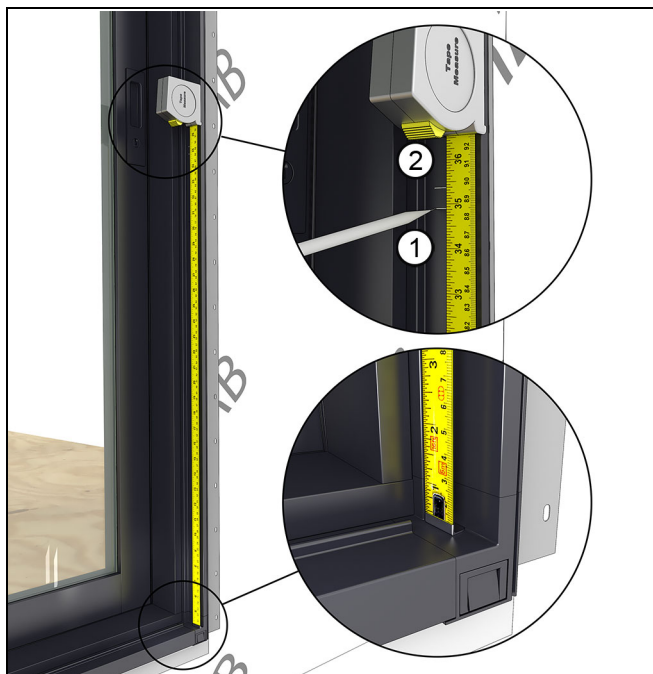


Figure 3

1	34 7/8"
2	35 3/8"

2. Mark 1 5/16" (33) from the edge of the frame at the previously marked locations. [See Figure 4.](#)



Figure 4

1	1 5/16"
---	---------

3. Drill pilot holes with a 1/16" (1.5) drill bit. Loosely fasten the strike to the jamb with the two #4 x 1/2" pan head screws. [See Figure 5.](#)



Figure 5



Tip

Lift the screen latch to the open position. Mark the location of the bottom of the latch and transfer that over to the jamb. That will allow you to index the strike in relation to the latch in the next step. [See Figure 6.](#)



Figure 6

4. Move the strike so the top is 1/8" (3) below the latch (mark) and tighten the screws. Close the screen and check the latch operation. Raise or lower the strike as needed.



Figure 7

1	1/8"
---	------

Removing the Screen

1. To remove screen, simply remove screws attaching screen to roller bar, see [Figure 8](#). Lift the screen off the guide or remove entire screen assembly out by lifting the bottom rail guide off the sill screen guide and pull the entire assembly out of the head jamb track. See [Figure 9](#).

(This is reverse of the procedure, [Install and Adjust the Screen on page 1](#)).



Figure 8

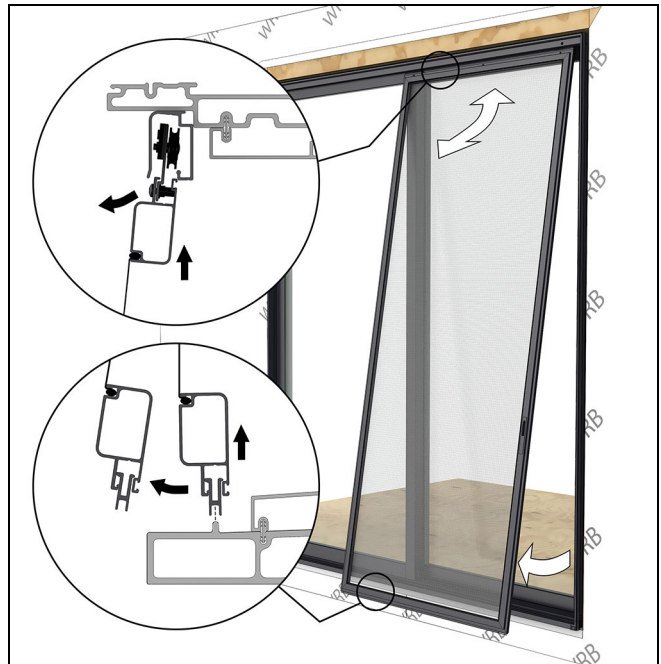


Figure 9